

SOFT SERVE ICE CREAM MACHINE

OPERATING INSTRUCTIONS

*****ICE CREAM MACHINE REQUIRES AT LEAST 1 HOUR OF SET-UP PRIOR TO DISPENSING SOFT-SERVE ICE CREAM*****

POWER SUPPLY/LOCATION

The Ice Cream Machine MUST be plugged directly into an outlet. Extension cord(s) cannot be used. The Ice Cream Machine must have a minimum of 24 inches of space in every direction to properly vent and cool.

PRODUCT

Only liquid product can be used in the Ice Cream machine. Powdered or frozen products cannot be used.

- 1 Case of Anderson Erickson Ice Cream Mix (9) ½ gallon containers, makes roughly 150 (6) ounce servings.

SETUP

Make sure the dispenser handle is closed prior to pouring product into the reservoir located at the top of the Ice Cream Machine. Once the dispenser handle is closed, remove the top cover and the regulator tube (white or silver tube) from the reservoir. Add the product to the reservoir and replace the regulator tube to the inlet. Note the regulator tube only needs to be removed the first time product is added. Make sure the regulator tube is placed in such a way that the end with a hole on the side is down in the mix.

Once you have filled the Ice Cream machine with product, replaced the regulator tube, and closed the top lid, you can now turn the Ice Cream Machine on. The power switch is located on the front of the Ice Cream Machine towards the top. Flip the switch to the auto or frost symbol. The Ice Cream Machine will take about an hour to cool and turn the liquid into soft-serve ice cream.

IN USE

While the Ice Cream Machine is in use, it is important to keep the reservoir full of product. The warning light located on the front of the Ice Cream Machine will indicate when the product is low/out. DO NOT let the product get too low or run-out, as the recovery time to dispense Ice Cream will increase. It is a good idea to designate someone to watch the product level during your event.

CLEAN-UP

THE ICE CREAM MACHINE MUST BE RETURNED CLEAN TO RECEIVE YOUR CLEANING DEPOSIT BACK.

*****DO NOT DISASSEMBLE ANY PART OF THE MACHINE*****

*****You will need a large bowl or container.*****

Once you are out of product to add, you can continue dispensing ice cream from the Ice Cream Machine until the product reservoir is nearly empty. Once the reservoir is nearly empty, remove the regulator tube, and switch the machine to the wash/cleanout or water symbol. This will continue pushing the remaining product out of the Ice Cream Machine. When the Ice Cream Machine is no longer pushing any product out, begin pouring warm water into the reservoir. Use a large bowl or container to flush out the water and excess product. Continue pouring warm water through the Ice Cream Machine until clear water is coming out of the dispenser. After you have confirmed the water is clear, leave the dispenser handle in the OPEN position for ventilation, turn off the machine, and un-plug. Do not forget to put the regulator tube back in the reservoir and replace the top lid.

If you have any questions, please call us at (319) 234-4421. We are available Monday – Friday from 7:00 AM – 5:00 PM.